

U8

Intel LGA 1700/1200/115X
AMD Socket AM5/AM4


INSTALLATION GUIDE

安装指南

Intel LGA 1700/1200/115X Installation


Step3:

Slide the threaded holes to adjust the mounting pitch for Socket 1700 or Socket 1200/115X/
滑动螺纹孔,调整节距以适配Socket 1700
或Socket 1200/115X平台

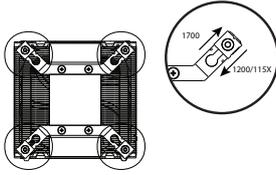

Step4:


Apply the thermal grease/涂Thermal grease

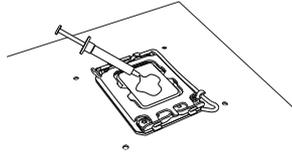

AMD AM5/AM4 Installation


Step1:

Install the AMD retention bracket/
安装AMD脚架

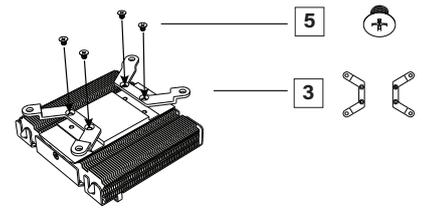


Step2:

Remove AMD Bracket Base from the Motherboard.
移除AMD主板上的塑料底托

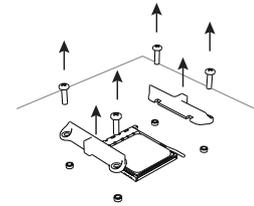

Intel Components & Tool/Intel 安装所需零件及工具

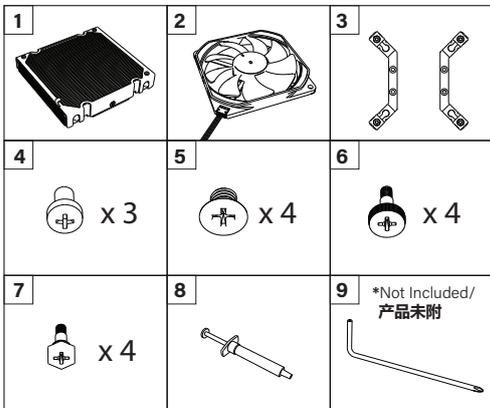


1. Cooler/散热器 2. Fan/风扇 3. Intel Retention Bracket Pair/
Intel脚架组 4. Fan Installation Screws/风扇安装螺丝 5. Retention
Bracket Installation Screws/脚架安装螺丝 6. LGA1700 Screws/
螺丝 7. LGA1200/115X Screws/螺丝 8. Thermal grease/导热膏
9. Philips Head Screw Driver (Not Included)/十字螺丝刀(产品未附,
需自行准备)

Intel LGA 1700/1200/115X Installation


Step5:

Remove the cooler protect sticker and install the cooler
on the CPU. Tighten the screw until stop/
撕去散热器保护贴纸,安装散热器,锁螺丝至停止

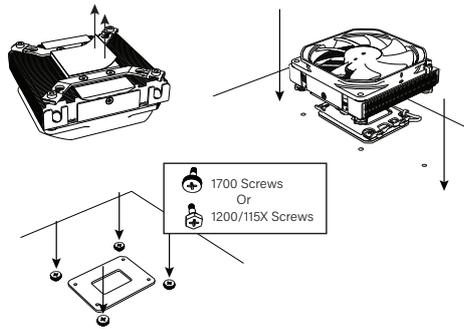

Step 6:


Connect the 4 Pin fan connector to the motherboard/
连接4 Pin风扇接头至主板

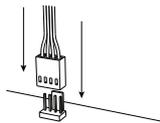

AMD AM5/AM4 Installation


Step3:

Apply the thermal grease/
涂Thermal grease

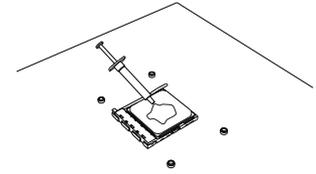

Step4:


Remove the cooler protect sticker and install the cooler.
Tighten the screw until stop/
撕去散热器保护贴纸,安装散热器,锁螺丝至停止

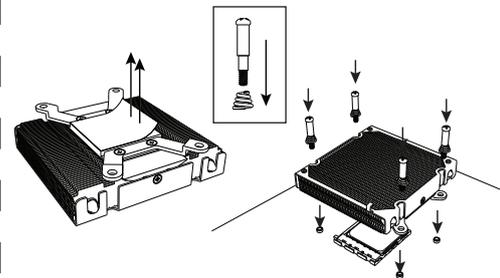

Intel LGA 1700/1200/115X Installation


Step1:

Install the Intel retention bracket/
安装Intel脚架

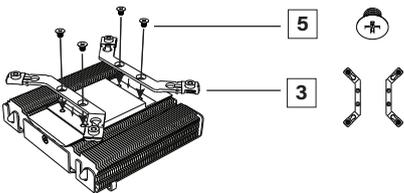


Step2:

Install the fan/安装风扇

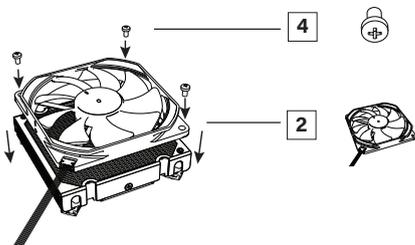

AMD Components & Tool/AMD 安装所需零件及工具

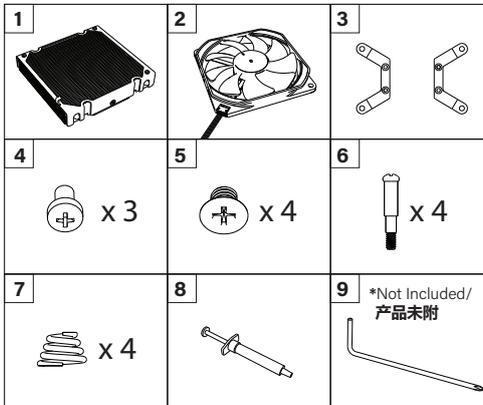


1. Cooler/散热器 2. Fan/风扇 3. AMD Retention Bracket Pair/
AMD 脚架组 4. Fan Installation Screws/风扇安装螺丝 5. Retention
Bracket Installation Screws/脚架安装螺丝 6. AMD Heatsink
Installation Screws/AMD散热器安装螺丝 7. AMD Heatsink Installation
Spring/AMD散热器安装弹簧 8. Thermal grease/导热膏 9. Philips
Head Screw Driver (Not Included)/十字螺丝刀(产品未附,需自行准备)

AMD AM5/AM4 Installation

Step5:

Install the fan/安装风扇

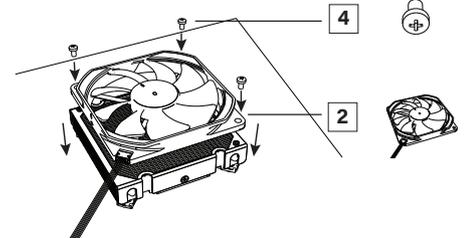

Step 6:

Connect the 4 Pin fan connector to the motherboard/
连接4 Pin风扇接头至主板

