



## **Manual**

**Rackmount KVM Switch RJ45**

**KS-3104 4-Port**

**KS-3108 8-Port**

**KS-3116 16-Port**



<b>1</b>	<b>Basic information .....</b>	<b>3</b>
1.1	Introduction .....	3
1.2	Scope of delivery .....	3
1.3	General information .....	3
<b>2</b>	<b>Safety.....</b>	<b>4</b>
2.1	Intended use .....	4
2.1.1	Environmental.....	4
2.1.2	Disposal.....	4
2.2	General information.....	4
2.3	Danger and protection .....	4
<b>3</b>	<b>Product information .....</b>	<b>5</b>
3.1	Hardware requirements .....	5
3.2	Features.....	5
3.3	Front view.....	6
3.4	Rear view .....	7
3.5	Dongle.....	8
<b>4</b>	<b>Mounting into a Rack.....</b>	<b>9</b>
<b>5</b>	<b>Installation and implementing .....</b>	<b>9</b>
5.1	Direct connection.....	9
5.2	Cascading .....	9
5.3	Operating .....	10
<b>6</b>	<b>Handling .....</b>	<b>11</b>
6.1	Toggle by switches .....	11
6.2	Toggle by hotkeys .....	12
<b>8</b>	<b>Maintenance.....</b>	<b>14</b>
<b>9</b>	<b>Disposal .....</b>	<b>14</b>
<b>10</b>	<b>Warranty terms .....</b>	<b>14</b>
<b>11</b>	<b>Contact.....</b>	<b>15</b>

# 1 Basic information

## 1.1 Introduction

Thank you for buying an Argus Rackmount KVM Switch.

The Rackmount KVM RJ45 series comply to RoHS III as well as to the eco directive 2009/125/EU.

To enjoy this product for a long time we recommend to read this manual carefully and especially paying attention to the security advices.

## 1.2 Scope of delivery

1x Rackmount KVM RJ45 (4/ 8/ 16-Port, depends on model)

1x External power supply 9V= DC

1x Power cord

1x 4/ 8/ 16x Dongle RJ45 to VGA/ USB (depends on model)



2x Mounting brackets for rack mount

6x Screws to fix the mounting brackets

1x Safety instructions/ QIG

1x CD with manual

## 1.3 General information

Symbols	Meaning
	Handling and effects of safety instructions.
	Dangerous situation, which <b>can</b> retighten violation or death

## 2 Safety

### 2.1 Intended use

#### 2.1.1 Environmental

This product is only for indoor use and connecting of computers.

Don't use and store it inside humid rooms or near water.

Don't use it close to source of heat. The additional heat could lead to overheating and fire.

#### 2.1.2 Disposal

Don't put this device to normal waste.

Please read the instruction in chapter 8 for disposal of packaging and device.



### 2.2 General information

Please read this manual carefully before installing or using this product.

Keep this manual and pass it by passing of the product.

Please follow the instructions and warning of this manual before using the product.

The inobservance of this manual can effect violations and damage.

We disclaim liability for violations and damages caused by inobservance of this manual.

### 2.3 Danger and protection

Don't damage the cable.

Don't use patched or damaged cable.

Don't put the device close to heating.

In case of strange noise or smell pull the power cord out of the socket.

Don't open the device.

Please ensure, that all cables will be fixed permanently.

Keep the product away from children.

Don't remove the cable with wet hands (electric strike).

Don't use the product with wet hands (electric strike).

Please remove the power cord from socket in case of longer non-use

(Could led to overheating, fire hazard or electric strike).



Flammable

Keep the product free of dust (Overheating or fire).

Look for sufficient airflow to avoid overheating and fire.

Leave service or cleaning only authorized qualified personnel.

### 3 Product information

The rackmount KVM RJ45 switches are devices to control different computers over long distances. Depending the model you can control 4-16 computer directly or up to 256 computer by cascading with other switches.

The devices are easy to install without using any additional software.

Toggling between computers will be made by switches at the front of the KVM or by using the integrated On-Screen menu.

These KVMs are comply to the EMC standards EN 55032 Class B und EN 55024. It can cause interferences on radio or other electronic devices by improper use. For proper use use screened network cable up from Cat 5e.

#### 3.1 Hardware requirements

##### Console

- Mouse
- Keyboard
- Monitor

##### Computer

- USB connection
- VGA connection

Network cable (not included)

 
#### 3.2 Features

- A rackmount KVM RJ45 switch controls up to 16 Computer (depends on model).
- Distance between rackmount KVM RJ45 and computers up to 50m.
- Supports USB and PS/2 at control console.
- Supports USB at computers.
- Toggling by switches or On-Screen menu.
- LED status signals.
- Auto-Scan-Function.
- High Video quality.
- Easy installation.
- Hot-Plug-Function, Add/ Delete of computer without restart of KVM.


- Controls up to 256 computer using a double cascading.
- Max. resolution 1600x900 / 1280x1024
- Supports WIN95/ 98/ 98SE/ ME/ 2000/ XP, Win7, Win8, WinNT, UNIX, Linux

### 3.3 Front view


KS-3104

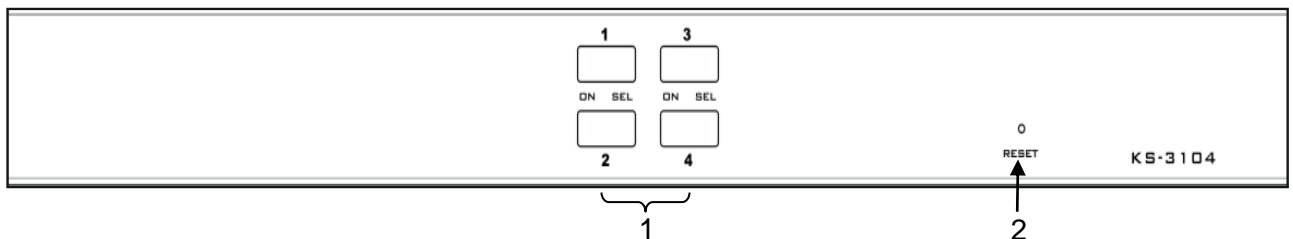

KS-3108

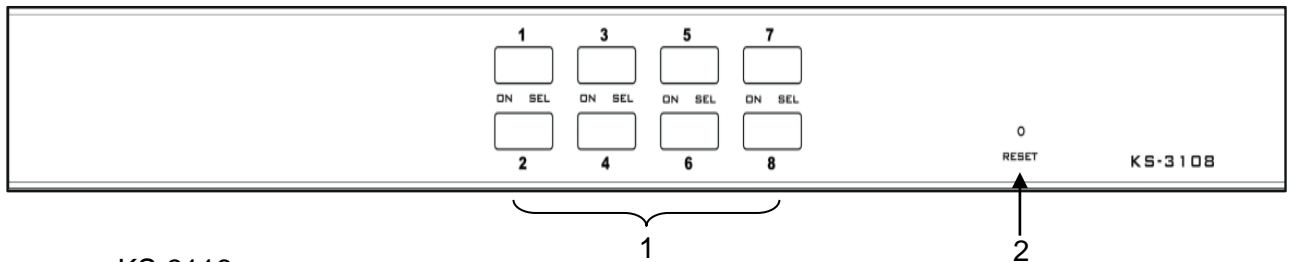 


KS-3116

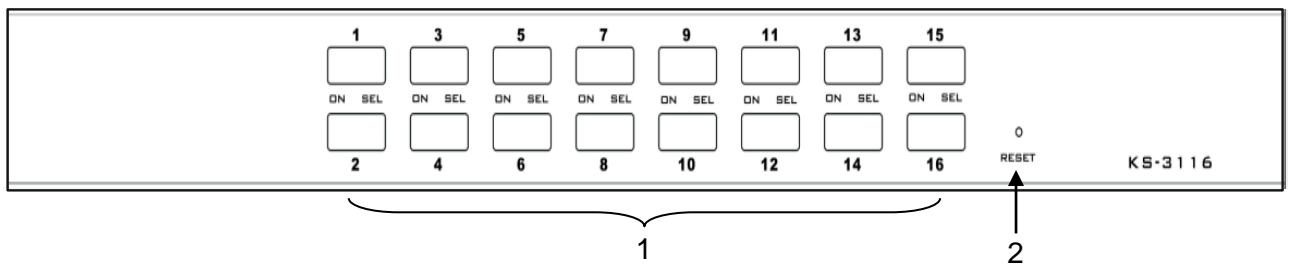 


- 1 Switches and LEDs  
Toggle directly using the according switch.  
LEDs  
Left LED RED = Computer connected  
Right LED GREEN = Selected port
- 2 Reset  
Push reset button to restart the KVM

### 3.4 Rear view

 
KS-3116

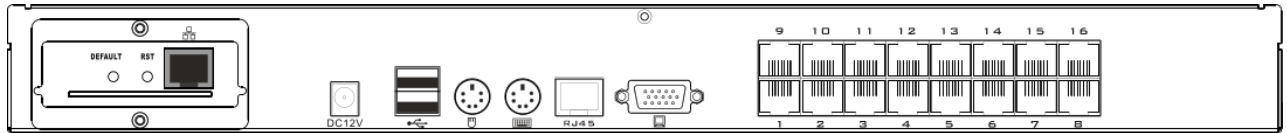

KS-3108

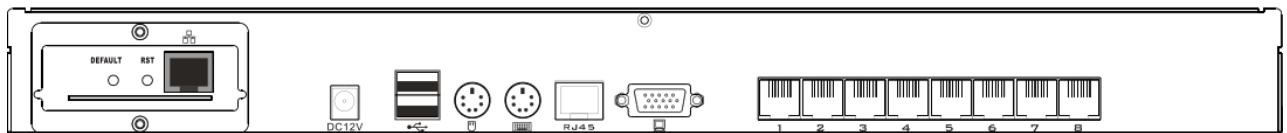 


KS-3104

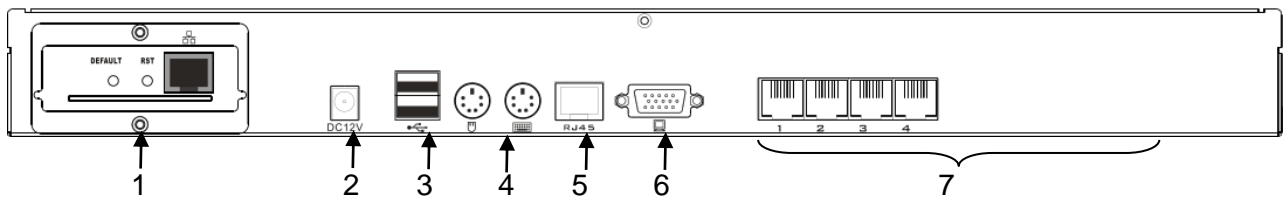 

- 1 Slot for optional IP module KI-4101
- 2 Socket for external 9V= or 12V= power supply
- 3 USB port  
For keyboard/ mouse of control console
- 4 PS/2 port  
For keyboard/ mouse of control console
- 5 Console port  
To connect another KVM of this series  
Use network cable Cat 5e or up, up to 50m length.
- 6 VGA port for control console  
RJ45 socket to control computer  
Use network cable Cat 5e or up, up to 50m length.

### 3.5 Dongle

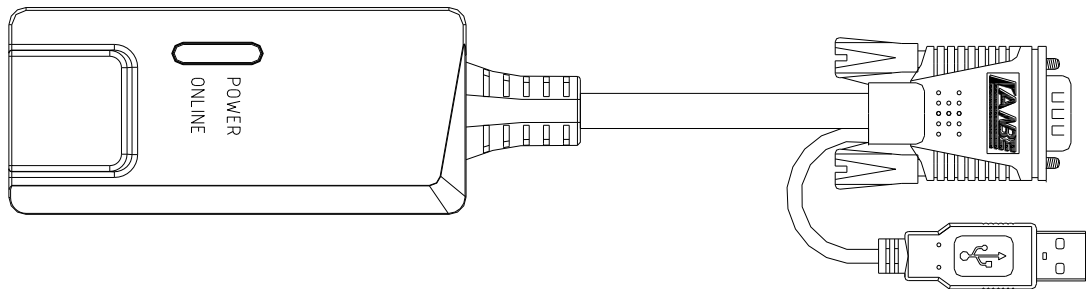 

Necessary to connect network cable with computers.

Connectors:            1x RJ45  
                              1x VGA for monitor  
                              1x USB for mouse/ keyboard control



## 4 Mounting into a rack

1. Take out the KVM and check the package content for completeness or damages.

In case of missing parts or external damages, please contact your local dealer for replacement.

Please keep the original package for shipping in case of warranty case.

2. Take care to shut down all devices first.
3. Takeout the rackmount brackets and fix them with three screws each.
4. Fix the Rackmount KVM into the rack. The needed screws are not in the scope of delivery of the KVM but from the rack.

## 5 Installation and implementing

### 5.1 Direct connection

1. Connect a network cable to the KVM using ports 7 (look at pos. 3.4). Follow max. length of 50m. We recommend to use network cable Cat5e or up.
2. Connect the other side of the network cable with the dongle.
3. Connect the dongle with the monitor and USB port of the computer.
4. Repeat this for every computer.
5. Connect Monitor, keyboard and mouse with your console.
6. Connect the external power adapter with the KVM and with the electric grid.
7. The installation is complete.

### 5.2 Cascading

1. Connect the computers like written before.
2. Connect Monitor, keyboard and mouse with your console.
3. Connect another KVM from Argus series, using the console port 5 (look at pos. 3.4).
4. Connect further computers with the additional KVM.

**Tip:** The KVM will always access to the first port. Either from first KVM or (if connected) from last KVM, if several KVMS are linked.

### 5.3 Operating

#### 1. Hot-Swap

You can connect or disconnect computers without restart the KVM.

#### 2. Turn off and Restart

Normally the rackmount KVM won't be turned off. In case it's necessary to turn it off, please follow these instructions:

 
1. Disconnect the KVM from power.
2. Turn off all linked computers.
3. Wait 10 seconds and connect the KVM to power again.
4. Turn on all linked computers.
5. It's ready again.

## 6 Handling

You can control the KVM by using the switches at the front or by using Hotkeys.

### 6.1 Toggle by switches

Below is shown the KS-3108. The use of the other KVM is accordingly. Please look also at chapter 3.3.

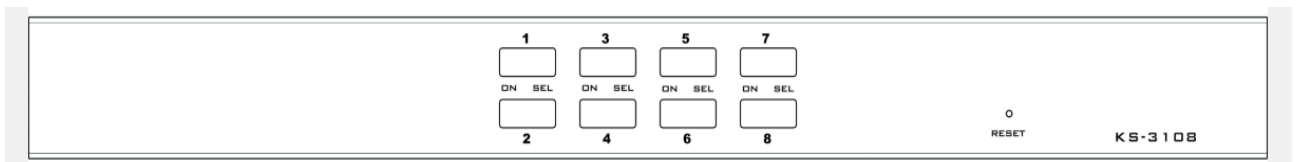


The switches at the front of the device are control buttons as well as LED indicators.

You can switch between the computers by pushing the buttons. The right LEDs show the selected port. The left LEDs show the online status of these ports.

## 6.2 Toggle by On-Screen menu

 To start the On-Screen menu press „Ctrl“ or „Scroll“ twice.

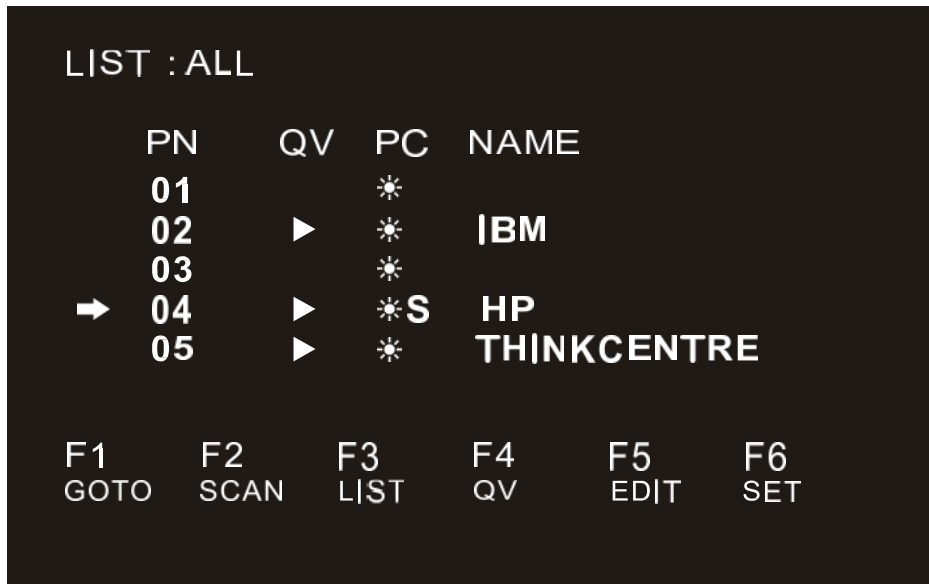

PN Available ports.  
The port, marked by arrow is actually selected.

QV Quick view.  
Port in Quick view list are marked with the triangle.

PC Displays online computers

Name Name of port if specified.

F1 GOTO The GOTO function allows you to switch directly to the connection port by typing the port name or its port number.

F2 SCAN The "SCAN" function allows you to perform automatic port scanning of the connected computers. Users can switch ports in order to view the corresponding port computer status.

The SCAN function can automatically scan from current selected port, the scan interval can be set by users.

When scanning, a small window on the screen indicates the current port number.

Press [Space] to stop scanning, and the KVM switches to the port last scanned.

F3 LIST Choose between different view lists.

ALL Shows all ports.

QVIEW Shows Quick View list.

	POWERED ON	Shows only turned on computers.
	POWERED ON+	Shows turned on computers from Quick View list.
	QVIEW+NAME	Shows named ports from Quick View list.
	NAME	Shows only named ports.
	Choose option with arrow keys and press Enter.	
F4	QV	Selects a port for Quick View. Selection will be shown by a triangle. Deselect port by pressing F4 again
F5	EDIT	Give a name to a port. Choose first a port and then press F5. Then enter the name of the port.
F6	SET	Set up On-Screen menu.

Choose option with arrow keys and press Enter.

#### OSD ACTIVATING HOTKEY

Short keys to open the OSD.

CTRL + CTRL	HOTKEY is Ctrl
SCROLL + SCROLL	HOTKEY is Scroll
ALT + ALT	HOTKEY is Alt
SHIFT + SHIFT	HOTKEY is Shift

#### SWITCH HOTKEY

Short keys to switch ports.

CTRL + CTRL + NUM	HOTKEY is Ctrl.
SCROLL + SCROLL + NUM	HOTKEY is Scroll
ALT + ALT + NUM	HOTKEY is Alt
SHIFT + SHIFT + NUM	HOTKEY is Shift

NUM is the wished port (E.g. 2 for port 2).

#### SCAN DURATION

Selects the scan interval

Possible: 3, 5, 10, 15, 20, 30, 40 and 60 seconds

#### SCAN DURATION

Selects scan duration for each port

#### SET PASSWORD

Change password

### SET SUPER PASSWORD

Change administrator password

### CLEAR THE NAME LIST

Delete name list. Password necessary.

### RESTORE DEFAULT VALUE

Password is necessary. After restore password is deleted.

### LOCK CONSOLE

Locks/ Unlocks the control of ports by switches and OSD. Password necessary.

## **8 Maintenance**

This device needs no maintenance which requires opening of the housing or working inside the device.

## **9 Disposal**

Please dispose your product by using the special discharge point for electronic waste. Please ask your municipality or disposal company in case of further questions.

Card boards and plastics of packaging can be disposed by using the usual way of disposal of these materials.



## **10 Warranty terms**

Inter-Tech grants 24 months warranty by proper use up from the date of purchase.

In case of warranty please contact your local dealer or the dealer from which you bought the product.

We will grant no warranty by:

- Missing or damaged warranty seal,
- Negligent behavior,
- Improper use,
- Nonobservance of the manual,
- External violence,

- Acts of god,
- Damages caused by manipulation, upgrading, updating or reconstruction of hardware or software
- Damages caused by other harm,

In case of data loss Inter-Tech will only be liable at wanton negligence or deliberate intention or, in all other cases, only for the recovery of data from a continuous, daily backup. Inter-Tech does not assume liability for all other matters.

Please look also at our complete warranty terms on our website.

## 11 Contact

Inter-Tech Elektronik Handels GmbH  
Hainhäuser Weg 93  
D-30855 Langenhagen  
Germany

Tel: +49 511 72667830

Fax: +49 511 72667837

Email: [vertrieb@inter-tech.de](mailto:vertrieb@inter-tech.de)

Web: [www.inter-tech.de](http://www.inter-tech.de)  
[www.sinan-power.de](http://www.sinan-power.de)  
[www.cobanitrox.de](http://www.cobanitrox.de)



[www.inter-tech.de](http://www.inter-tech.de)